




ES12 EFFLUENT CHAMBER VOLUME TABLE

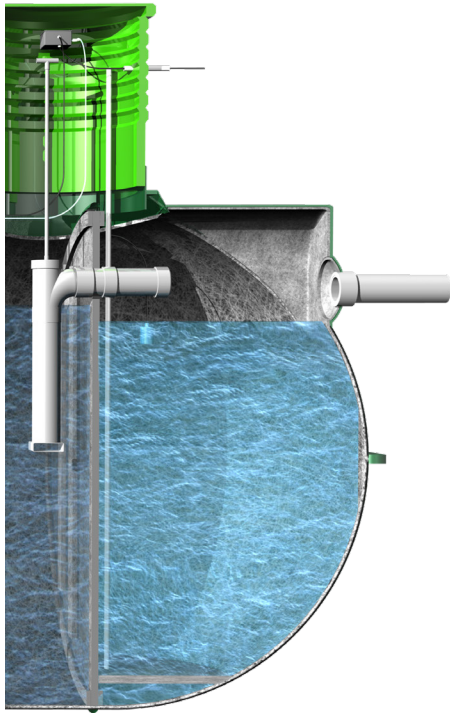

Liquid Depth	Gallons Per Inch	Gallons In Chamber
58 ¹	7	473
57	7	465
56 ²	8	458
55	8	450
54	8	442
53	9	434
52	9	425
51	9	416
50	9	407
49	10	398
48	10	388
47	10	379
46	10	369
45	10	359
44	10	349
43	10	338
42	10	328
41	11	317
40	11	307
39	11	296
38	11	286
37	11	275
36	11	264
35	11	254
34	11	243
33	11	232
32	11	222
31	10	211
30	10	201

Liquid Depth	Gallons Per Inch	Gallons In Chamber
29	10	190
28	10	180
27	10	170
26	10	160
25	10	150
24	10	141
23	9	131
22	9	122
21	9	113
20	9	104
19	8	95
18	8	87
17	8	79
16	7	71
15	7	63
14	7	56
13	6	49
12	6	43
11	6	37
10	5	31
9	5	26
8	4	21
7	4	16
6	3	13
5	3	9
4	3	6
3 ³	2	0
2	0	0
1	0	0

¹ to invert of effluent filter. Above this level, water will fill remainder of the tank's above-board volume (450 gallons total above normal operating level). ² to invert of gravity outlet. ³ the pump shelf is 3" off bottom of tank