




ES7.5 EFFLUENT CHAMBER VOLUME TABLE

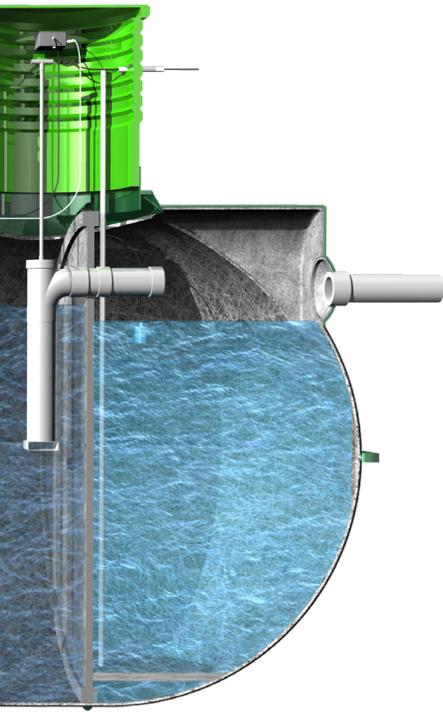

Liquid Depth	Gallons Per Inch	Gallons In Chamber
58 ¹	6	381
57	6	376
56 ²	6	370
55	6	363
54	7	357
53	7	350
52	7	343
51	7	336
50	8	329
49	8	321
48	8	313
47	8	305
46	8	297
45	8	289
44	8	281
43	9	272
42	9	264
41	9	255
40	9	247
39	9	238
38	9	229
37	9	220
36	9	211
35	9	203
34	9	194
33	9	185
32	9	176
31	9	168
30	9	159

Liquid Depth	Gallons Per Inch	Gallons In Chamber
29	8	151
28	8	142
27	8	134
26	8	126
25	8	118
24	8	110
23	8	102
22	7	94
21	7	87
20	7	80
19	7	73
18	6	66
17	6	60
16	6	53
15	6	47
14	5	42
13	5	36
12	5	31
11	4	27
10	4	22
9	4	18
8	3	15
7	3	11
6	2	8
5	2	6
4	2	4
3 ³	2	0
2	0	0
1	0	0

¹ to invert of effluent filter. Above this level, water will fill remainder of the tank's above-board volume (305 gallons total above normal operating level). ² to invert of gravity outlet. ³ the pump shelf is 3" off bottom of tank